

EXHIBIT 2

Handbook
Aptiva
Handbook
Aptiva

Aptiva

Handbook



Aptiva

Handbook

First Edition (May 1996)

The following paragraph does not apply to any state or country where such provisions are inconsistent with local law: INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. References to IBM products, programs, or services do not imply that IBM intends to make them available outside the United States.

This publication could contain technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be made in later editions. IBM may make improvements and/or changes in the product(s) and/or program(s) at any time.

Address comments about this publication to IBM HelpCenter - Aptiva PC, IBM Corporation, 3039 Cornwallis Rd., Dept. BM1/203, Research Triangle Park, NC 27709-2195 USA. Information you supply may be used by IBM without obligation.

For copies of publications related to this product, call toll free 1-800-IBM-7282 in the Continental U.S.A. In Canada, call toll free 1-800-465-7999.

© Copyright International Business Machines Corporation 1996. All rights reserved.

Note to U.S. Government Users - Documentation related to restricted rights - Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

Contents at a glance

Part 1: Learning about this book	1
Chapter 1: Using this book	3
Part 2: Controlling system settings	9
Chapter 2: Getting started with your Aptiva computer	11
Chapter 3: Understanding Rapid Resume features	23
Chapter 4: Viewing and changing Aptiva configuration	31
Part 3: Upgrading and replacing hardware	51
Chapter 5: Preparing to upgrade	53
Chapter 6: Adding and replacing system board components	63
Chapter 7: Adding and removing adapter cards and drives	81
Part 4: Troubleshooting	129
Chapter 8: Diagnosing and recovering from problems	131
Part 5: Technical reference	159
Appendix A: Specification tables	161
Appendix B: Audio and video cards	171
Appendix C: Modem information	173
Appendix D: Monitor terminology	191
Index	193

Table of contents

Notices	xiii
Safety information	xiii
Trademarks	xiv
Hardware and software assistance	xiv

Part 1: Learning about this book **1**

Chapter 1: Using this book **3**

How this book is organized	3
Presentation conventions used in this book	5
Where to find more information	6

Part 2: Controlling system settings **9**

Chapter 2: Getting started with your Aptiva computer **11**

Controlling monitor settings	11
Getting the best performance from your monitor	12
Power saver feature	12
Changing display settings	12
Customizing display properties	13
Tips for choosing display properties	15
Using the Windows Help function to select display properties	15
Controlling volume	16
Adjusting the speaker volume	16
Adjusting the headphone volume	16
Getting ready to print	17
Setting up communications	18
Connecting your modem to the telephone network	19
Configuring your communications software	19
Configuring your Aptiva computer for a connection to the Internet	20

The IBM Internet Connection	20
The Internet Setup Wizard	21
Chapter 3: Understanding Rapid Resume features	23
Starting the Rapid Resume Manager	24
Rapid Resume features	24
Rapid Resume	24
Automatic Power Off	25
Standby features	26
Standby	26
Snapshot	26
Scheduler features	27
Scheduler	27
Automatic Power On	27
Wake Up on Ring features	27
Wake Up on Ring	28
Ring Indicator	28
How Rapid Resume features change your computer's behavior	28
Chapter 4: Viewing and changing Aptiva configuration	31
Using the Setup Utility	31
Starting the Setup Utility	32
Working with the Setup Utility menus	33
Changing and restoring settings	34
Restoring factory settings	34
Viewing system information	35
Viewing video configuration	35
Video controller	35
Video memory	35
Changing disk drive configuration	35
Diskette drive (A: or B:)	35
Hard disk drive and CD-ROM drive	36
Changing input/output port configuration	37
Serial port A	37
Parallel port	37
Parallel port mode	38

Mouse	38
Keyboard NumLock state	38
Keyboard speed	38
Changing Rapid Resume features configuration	39
APM BIOS mode	39
Rapid Resume	39
Standby	40
Wake Up on Ring	41
Automatic Power On	41
Rapid Resume advanced options	42
Changing adapter card device information	44
Plug and Play cards detected	44
ISA Legacy resources	44
Configuring startup options	45
Startup devices (First - Fourth)	45
System memory test	46
Virus detection	46
Viewing model information	46
Setting the date and time	46
Configuring advanced options	47
Security options	47
Cache options	48
ROM shadowing	49
PCI card options	49
Memory timings	49
Using other configuration utilities	50

Part 3: Upgrading and replacing hardware51

Chapter 5: Preparing to upgrade	53
Understanding the differences between the desktop and minitower systems	54
Inside the desktop system	54
Inside the minitower system	55
Similarities between the systems	55
Evaluating your new hardware	56
For conflicts with system resources used by an Mwave card	56

For conflicts with system resources used by a Plug and Play card	57
For conflicts with other system resources	57
Planning your hardware changes	58
Understanding the Setup Utility's role	58
Planning an order for hardware changes	58
Recording your changes	60
Opening the system unit	60
Opening a desktop system unit	60
Opening a minitower system unit	61

Chapter 6: Adding and replacing system board components 63

Accessing the system board	63
If you need to remove the riser card in a minitower system	64
Identifying the parts of the system board	65
Installing an upgrade processor	68
Installing cache memory modules	69
Inserting a new module	69
Replacing an existing module	70
Installing system memory modules	71
Installing dual inline memory modules	72
Replacing an existing DIMM	73
Installing single inline memory modules	74
Removing single inline memory modules	75
Upgrading video memory	76
Replacing the system battery	78
Updating the Setup Utility	79
For a cache memory module	79
For system memory modules	79
For the system battery	79

Chapter 7: Adding and removing adapter cards and drives 81

Resolving Mwave resource conflicts	81
Resolving resource conflicts	82
Resolving joystick port conflicts	82
Starting and using the Windows 95 Device Manager	82
Resolving Plug and Play resource conflicts	83

Working with the hardware in the desktop system unit	86
Identifying the parts of the system unit	87
Adding and removing adapter cards	89
Identifying adapter card connectors	89
Identifying card cable connectors	89
Setting jumpers	90
Installing adapter cards	93
Connecting card cables	93
Removing adapter cards	94
Adding and removing drives	94
Identifying drive bays	94
Removing and replacing bay panels	95
Identifying signal cable connectors	95
Guidelines for connecting IDE/ATA signal cables	96
Guidelines for connecting diskette AT interface signal cables	98
Tip for proper drive alignment	98
Installing a drive in bay 1	99
Installing a drive in bay 2	101
Installing a drive in bay 3	103
Installing a drive in bay 4	105
Connecting signal cables	107
Removing drives	107
Working with the hardware in the minitower system unit	108
Identifying the parts of the system unit	109
Adding and removing adapter cards	111
Identifying adapter card connectors	111
Identifying card cable connectors	111
Setting jumpers	112
Installing adapter cards	115
Connecting card cables	115
Removing adapter cards	116
Adding and removing drives	116
Identifying drive bays	116
Removing and replacing bay panels	117
Identifying signal cable connectors	118
Guidelines for connecting IDE/ATA signal cables	119
Guidelines for connecting diskette AT interface signal cables	121

Tip for proper drive alignment	121
Installing a drive in bay 1	122
Installing a drive in bay 2 or 3	123
Installing a drive in bay 4	124
Installing a drive in bay 5	125
Installing a drive in bay 6	126
Connecting signal cables	127
Removing drives	127
Updating the Setup Utility	127
For adapter cards	127
For drives	128

Part 4: Troubleshooting 129

Chapter 8: Diagnosing and recovering from problems 131

Before you panic: some simple fixes	131
Solving hardware problems	135
Solving software problems	141
Solving monitor problems	146
Solving audio, multimedia, and modem problems (Mwave)	148
Responding to error codes	149
Recovering factory installed programs and files	156

Part 5: Technical reference 159

Appendix A: Specification tables 161

Memory module placement	161
Memory map	163
System input/output addresses	164
System interrupts	166
DMA channel assignments	168
Serial port addresses	169

Appendix B: Audio and video cards	171
About sound cards	171
About Mwave cards	171
About television cards	172
Appendix C: Modem information	173
About modems	173
Operating your modem	173
Using the Auto Answer feature	174
Disabling Call Waiting	175
How modems work	175
Modem connection process	175
Data modems	176
Connecting to other data modems	177
Fax modems	178
Choosing fax software programs	178
Communications settings	179
Changing modem addresses for the Mwave adapter card	179
Changing modem addresses for non-Mwave adapter cards	179
Modem commands	180
Modem return codes	183
S registers	184
United States modem regulations	187
FCC and telephone company requirements	187
Canadian modem regulations	188
Canadian Department of Communications certification label	188
Étiquette d'homologation du Ministère des Communications du Canada	188
Appendix D: Monitor terminology	191
Index	193

Customizing display properties

In Windows 95, you can change display options such as screen resolution, number of colors, refresh rate, and the size of displayed characters.

If you need assistance in selecting display properties, highlight an area of the Display Properties window and press the **F1** key to read about the selected topic.

To customize your display properties:

1. Double-click on the **My Computer** icon on your desktop.
2. In the My Computer window, double-click on the **Control Panel** folder.
3. In the Control Panel window, double-click on the **Display** icon.
4. In the Display Properties window, click on the **Settings** tab.

In the Settings section of the Display Properties window, you can set the following display properties:

- Color palette
- Screen area

Lets you specify the number of colors that can be displayed on the screen.

- Screen area

Lets you specify the screen resolution. The resolution setting determines the amount of information that can be displayed on your screen.

The larger the resolution setting numbers, the more you can see on your screen, but the smaller the images on the screen appear.

- Desktop area

Lets you specify the total viewable area. This area can be larger than the size of your screen. If you select a desktop area that is larger than the size of your screen, your desktop will "scroll" as you move the mouse or cursor beyond the edge of the screen area.

Windows 95 may reset the desktop area to the size of the screen when you restart the system or complete a Rapid Resume cycle.

note:

- Font size

Lets you specify the size of the characters displayed on the screen.

You should generally use the default setting for font size since some programs were not designed to work with large fonts.

The values you can choose for screen area (resolution) and colors will be limited by:

- Your monitor's maximum horizontal frequency.
- The amount of video memory available on the computer's system board.

To find out how much video memory your system uses, go to the Setup Utility. For these instructions, see "Using the Setup Utility" on page 31.