

EXHIBIT 5

Nokia N900 User Guide

Issue 1.3

2 Contents

Contents

About your device	19
About the desktop	20
Applications menu	21
Status area and status menu	21
Dashboard	23
About the touch screen	24
Text input	25
Protect your device	29
Explore Ovi	29

Personalize your device

Edit and personalize the desktop	30
Profile settings	31
Change the background image	31
Change the device language	31
Change themes	32

Connect your device

About connectivity	32
Network settings	32
Use a WLAN connection	33
Use a GPRS connection	37
Active data connections	38
Disable wireless connections	38
Internet connection settings	38
Bluetooth connectivity	39
USB connections	40

Get started

Set up your device	10
Keys and parts	14
First start-up	15
Kickstand	16
Stylus	16
Use accessories	17

Introduction

Key features	18
About Maemo software	18

Switch the device off

Press the power key, and select **Switch off!**.

Tip: You can also switch the device off by pressing and holding the power key.

Start-up wizard

1 Switch the device on. A welcome note is briefly displayed, and the start-up wizard opens.

2 The language, region, time and date settings are displayed. Define the following:

Language — Slide your finger up or down to scroll through the list, and select the language.

Region — Slide your finger up or down to scroll through the list, and select the region.

Time — Define the time format by moving the slider to **24 hrs** or **12 hrs**, and move the hands of the clock to the correct time with your finger. If you are using the 12-hour clock, move the slider to **AM** or **PM**.

 
Date — Set the date. To do this, slide your finger up or down on the day, month, and year columns.

3 To accept and save the settings, select **Save**.

Kickstand


The kickstand is on the back of the device, and when placed on a flat surface, can be used when you watch, for example, videos.

Open the kickstand

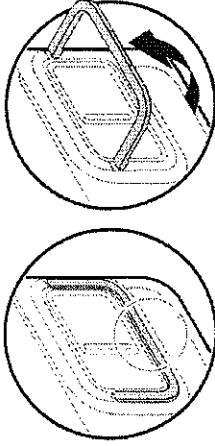


Stylus

 Some activities, such as sketching, may be easier to do with a stylus than with your finger.

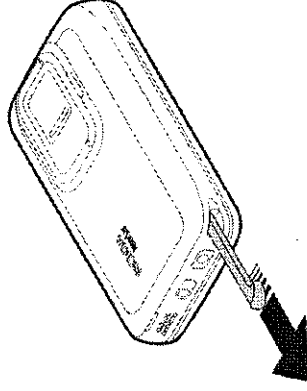



Important: Use only a stylus approved by Nokia for use with this device. Using any other stylus may invalidate any warranty applying to the device and may damage the touch screen. Avoid scratching the touch screen. Never use an actual pen or pencil or other sharp objects to write on the touch screen.

Switch between applications

When several applications are open, select  and the application you want to switch to.

Respond to a notification

- 1 When you receive, for example, a new mail, instant message, or text message, a notification is briefly displayed. You can view the message by selecting the notification. If you do not select the notification while it is displayed, the notification remains on the dashboard. To indicate this, the  icon blinks and then stays lit.
- 2 To view the notification on the dashboard, select .


About the touch screen

Touch screen actions

Tap

To select or open an application or other element on the touch screen, tap it once with your finger.

Select .

 
In this user documentation, opening applications or items by tapping them once is called 'selecting'. If you need to select several items in a sequence, the display texts to select are separated by arrows, for example  > **Phone**.

Select and hold

In many applications, you can open a context-sensitive pop-up menu by selecting and holding. To do this, place your finger on the item, until the pop-up menu opens.

Drag

Dragging can be used, for example, to scroll up or down a list. To drag, place your finger on the screen, and slide it across the screen.

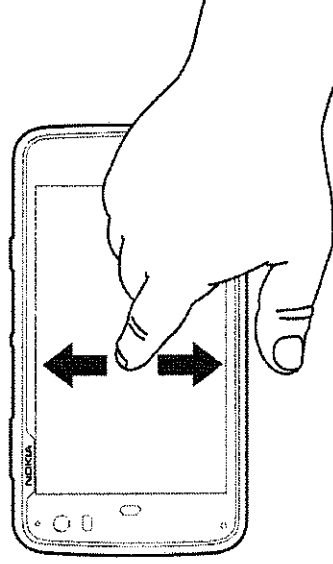

Swipe

Swiping can be used, for example, to switch between images in the Photos application. To swipe, slide your finger quickly left or right on the screen.